



# All Seasons Tent Sales

## 40 x 40 All Peak Frame Tent Set Up Instructions

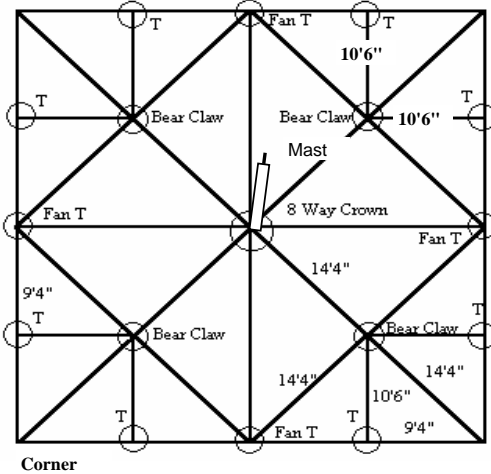

Pipe			
QTY	SIZE	COLOR	Style
1	7'		Mast
4	21'10"	Orange	Rafter
16	14'4"	Red	Hip Rafter
8	10'6"	Green	Corner Rafter
16	14'4"	Red	Spreader
16	7'8"	Black	Legs

Components	
QTY	Style
1	8 Way Crown APF
4	Regular Corners
8	Regular T's
4	Bear Claws
4	Fan T
16	Ratchets
16	Baseplates
16	Weights / Stakes
104	Tent Pins
Optional Items	
1	Brace Package

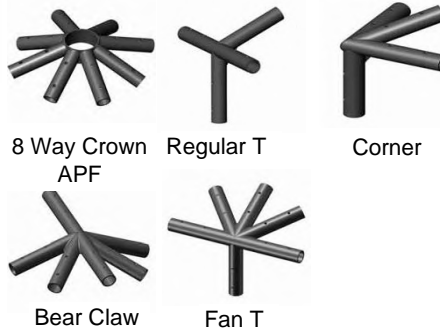

Pre-Site Inspection- Call your local utility companies prior to installation for any underground obstructions.

1. Layout the frame parts in the estimated location pertaining to the diagram. The spreader pipe is placed out to form the perimeter, and the rafters are laid in the interior location.

2. Start with the 8 way crown. Lay the crown on a flat surface to determine the correct placement, when the crown is on a flat surface the angles that are not touching the ground (every other one) will correlate with the 4 corners. Attach the hip rafters (14'4" red) to the 8 way crown at angle not touching the ground by sliding the pole over the fitting and lining up the holes in the pole with those in the fitting. Place a pin in the first hole to secure the pole in place. Repeat at all four corners.

3. Attach the poles (21'10" orange) to the remaining angles of the 8 way crown using the same technique as in step 2. Drop in the masts in the 8 way crown. Do not pin yet.

4. Attach the Bear Claw fittings to the 4 hip rafter (14'4" red), at point 6, by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin. Attach hip rafters (14'4" red) to the Bear Claw at points 1, 3, and 5. Attach corner rafters (10'6" green) to the Bear Claw fitting at points 2 and 4.

5. Attach the corner fitting to the hip rafter (point 3 only) by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin. Attach the Fan T to the rafters (21'10" orange) and to the hip rafters (points 1 & 5).

6. Join the regular t fittings to the corner poles (10'6" green) by sliding the pole over the fitting. Line up the hole of the pole with those of the fittings and place a pin.

7. The perimeter is ready for assembly. Connect the regular t's to the corners and fan t's using the spreaders (9'4" white). Slide the poles over the fittings, line up the holes, and pin the pole and fitting together. When all of the spreaders have been secured in place, the frame will be complete.

**OMIT next step if 1 Piece Top**

Lace the tent together: A) Line up the two crown patches in the middle of the tent section (the lace end will always be on the bottom). Starting in the middle and working out, B) Pull the first lace up through the first small grommet. C) Pull the second lace through the second grommet. D) Pull the second lace through the first lace's loop. E) Pull the third lace through third grommet. F) Pull the third lace through the second lace's loop. Repeat steps B through F down the lace line of the tent until the third grommet from the edge of the tent is reached, the third lace should be twice as long as all of the other loops (referred to as double loop). When the tent is laced down to the third grommet (the double loop), pull the remaining 2 laces through the remaining 2 grommets. Loop the second lace from the tent perimeter into the first lace (the lace is now going towards the direction of the double loop). Pull the third lace (double loop) through the second loop. The third lace (double loop) should now be strung through 2 loops (the second loop and the fourth loop). Tie-off the double loop with the fourth lace so the loops can not come loose. Note: This does not in anyway affect the strength of the tent; it holds the tent sections together. A simple double knot is effective. After lacing each section, you will need to fasten down the rain flap that covers the lace line by clipping the spring clips onto the rain flap closer rope.

8. Place the tent top over the frame, by spreading the tent out on one end and flapping the tent top while pulling it over the top. This, flapping, will make it easier to go over the frame and prevents any snags.

10. Secure the tent top to the frame by fastening the straps on the inside of the tent at each corner location.


11. Start at one corner and manually lift the frame so that the leg (7'8" black) can slide over the corner fitting. Pin the leg to the fitting. ( When raising the tent, raise INTO the wind)

12. Proceed to work your way around the tent putting one leg in at a time until all legs are standing and pinned. Put baseplate under legs and attach 1" ratchets from the "O" rings at the ends of the valance to the baseplates. Tighten loosely.

13. Now that the frame tent is erected, fasten the rest of tent top completely to the frame, using the straps on the inside of the tent. Make sure that all of the straps are 90% tight and that the tent top is sitting evenly over the frame. Push the mast up and pin accordingly. Finish strapping the tent top to the fame getting the tent top tight. Evenly tighten the ratchets straps on the corners. Make sure the rope through the valance slides smoothly.

14. Drive a stake about four feet out from each leg and tie off the rope or ratchet to each leg.

Your tent installation is now complete.

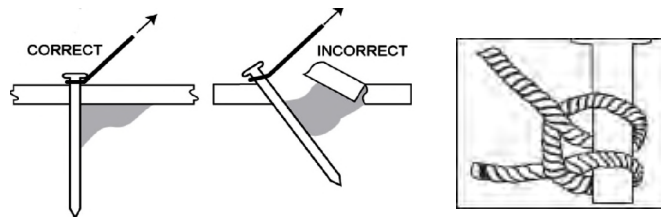

This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.