



# Infinity Tent Sales

## 10 x 20 Frame Tent Set Up Instructions

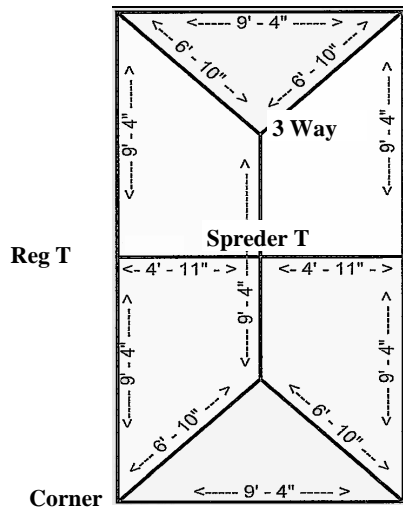

Pipe			
QTY	SIZE	COLOR	Style
7	9' 4"	White	Spreader
4	6' 10"	Blue	Hip Rafter
2	4' 11"	Red / White	Hip Rafter
6	7' 8"	Black	Legs


Components	
QTY	Style
2	3 - Way Crown
4	Corners
2	Regular T's
1	Spreader Slide T
6	Ropes
38	Tent Pins
Optional Items	
1	Brace Package
6	Weights / Stakes
6	Ratchets
6	Baseplates

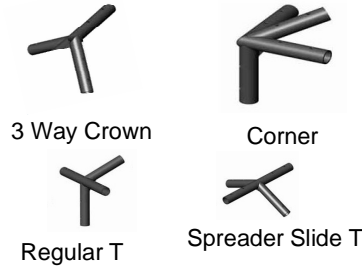

Pre-Site Inspection- Call your local utility companies prior to installation for any underground obstructions.

1. Layout the frame parts in the estimated location pertaining to the diagram. The spreader pipe is placed out to form the perimeter, and the rafters are laid in the interior location.
2. Start with the 3 way crowns. Attach the hip rafter (6'10" blue) to the 3 way crown by sliding the poles in or over the fitting ( depending if you have 1" or 2" Pipe) and lining up the holes in the pole with those in the fitting. Place a pin in the first hole to secure the pole in place. Then install the White 9'4" to the other 3 way crown BUT. slide the Spreader Slide T over the White 9'4" pipe so it is inbetween the 2 - 3 way crowns. Then add the 2 other Blue 6'10" to the second 3 way crown.
3. Attach the corner fitting to the hip rafter by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin.
4. The perimeter is ready for assembly. Connect the corners to the Regular T's using the spreaders (9'4" white). Slide the poles over the fittings, line up the holes, and pin the pole and fitting together. When all of the spreaders have been secured in place, the frame will be complete.
5. Place the tent top over the frame, by spreading the tent out on one end and flapping the tent top while pulling it over the top. This, flapping, will make it easier to go over the frame and prevents any snags.
6. Secure the tent top to the frame by securing the straps on the inside of the tent at each corner location.
7. Start at one corner and manually raise the frame so that the leg (7'8" black) can slide in or over the corner fitting. Pin the leg to the fitting. ( When raising the tent, raise INTO the wind)
8. Proceed to work your way around the tent putting one leg in at a time until all legs are standing and pinned.
9. Now that the frame tent is erected, fasten the rest of tent top completely to the frame, using the straps on the inside of the tent. Make sure that all of the straps are tight and that the tent top is sitting evenly over the frame.
10. Drive a stake about four feet out from each leg and tie off the rope or ratchet to each leg.

Your tent installation is now complete.

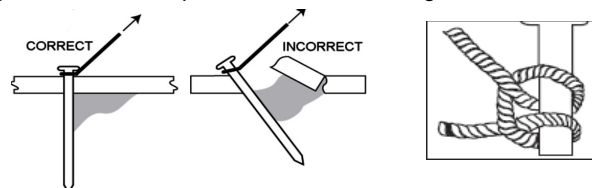



This document was created with the Win2PDF "print to PDF" printer available at <http://www.win2pdf.com>

This version of Win2PDF 10 is for evaluation and non-commercial use only.

This page will not be added after purchasing Win2PDF.

<http://www.win2pdf.com/purchase/>