


Infinity Tent Sales

12 x 12 All Peak Frame Tent Set Up Instructions

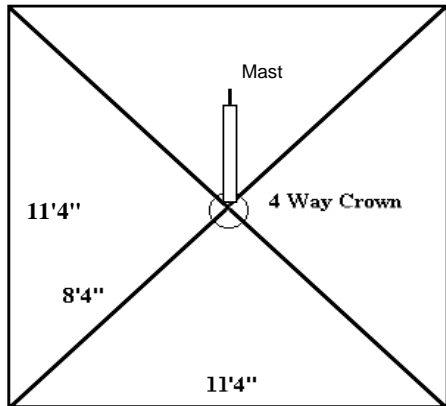

Corner

| Pipe | | | |
|------|--------|------------|------------|
| QTY | SIZE | COLOR | Style |
| 1 | 4'11" | | Mast |
| 4 | 11' 4" | Blue/White | Spreader |
| 4 | 8' 4" | Yellow | Hip Rafter |
| 4 | 7' 8" | Black | Legs |



4 Way Crown





Corner

| Components | |
|----------------|------------------|
| QTY | Style |
| 1 | 4 - Way Crown |
| 4 | Corners |
| 4 | Ratchets |
| 4 | Baseplates |
| 20 | Tent Pins |
| Optional Items | |
| 4 | Weights / Stakes |
| 1 | Brace Package |

Pre-Site Inspection- Call your local utility companies prior to installation for any underground obstructions.

1. Layout the frame parts in the estimated location pertaining to the diagram. The spreader pipe is placed out to form the perimeter, and the rafters are laid in the interior location.
2. Start with the 4 way crown. Attach the hip rafter (8' 4" yellow) to the 4 way crown by sliding the pole in or over the fitting (depending if you have 1" or 2" Pipe) and lining up the holes in the pole with those in the fitting. Place a pin in the first hole to secure the pole in place. Drop in the mast in the 4 way crown. Do not pin yet.
3. Attach the corner fitting to the hip rafter by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin.
4. The perimeter is ready for assembly. Connect the corners to the corners using the spreaders (11' 4" blue/white). Slide the poles over the fittings, line up the holes, and pin the pole and fitting together. When all of the spreaders have been secured in place, the frame will be complete.
5. Place the tent top over the frame, by spreading the tent out on one end and flapping the tent top while pulling it over the top. This, flapping, will make it easier to go over the frame and prevents any snags.
6. Secure the tent top to the frame by securing the straps on the inside of the tent at each corner location.
7. Start at one corner and manually raise the frame so that the leg (7'8" black) can slide in or over the corner fitting. Pin the leg to the fitting. (When raising the tent, raise INTO the wind)
8. Proceed to work your way around the tent putting one leg in at a time until all legs are standing and pinned. Put baseplate under legs and attach 1" ratchets from the "O" rings at the ends of the valance to the baseplates. Tighten loosely.
9. Now that the frame tent is erected, fasten the rest of tent top completely to the frame, using the straps on the inside of the tent. Make sure that all of the straps are 90% tight and that the tent top is sitting evenly over the frame. Push the mast up and pin accordingly. Finish strapping the tent top to the frame getting the tent top tight. Evenly tighten the ratchets straps on the corners. Make sure the rope through the valance slides smoothly.
10. Drive a stake about four feet out from each leg and tie off the rope or ratchet to each leg.

Your tent installation is now complete.

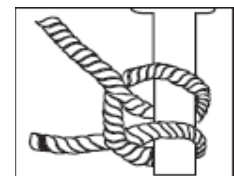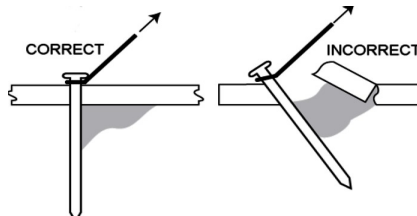

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.