



All Seasons Tent Sales

40 x 40 Contempo Frame Tent Set Up Instructions

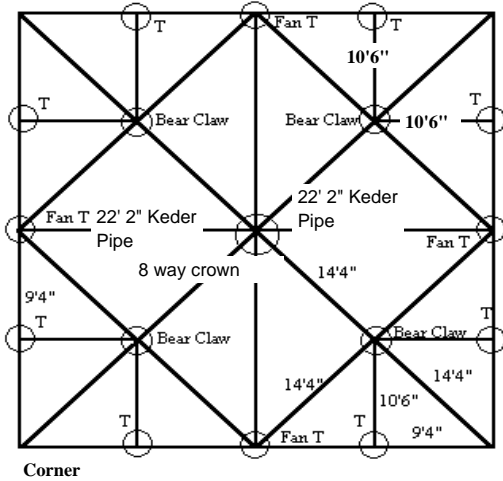

Pipe			
QTY	SIZE	COLOR	Style
2	22' 2"	Orange	Keder
2	21'10"	Orange	Rafter
16	14'4"	Red	Hip Rafter
8	10'6"	Green	Corner Rafter
16	9'4"	White	Spreader
16	7' 8"	Black	Legs

Components	
QTY	Style
1	8 Way Crown AT
4	Regular Corners
8	Regular T's
4	Bear Claws
4	Fan T
16	Ratchets
16	Baseplates
16	Weights / Stakes
104	Tent Pins
Optional Items	
1	Brace Package

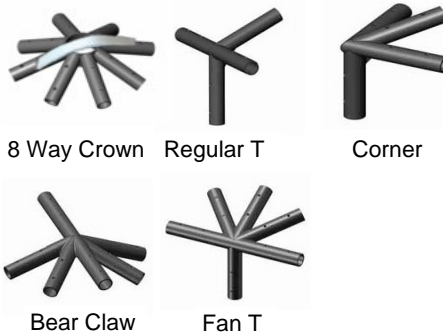

Pre-Site Inspection- Call your local utility companies prior to installation for any underground obstructions.

1. Layout the frame parts in the estimated location pertaining to the diagram. The spreader pipe is placed out to form the perimeter, and the rafters are laid in the interior location.

2. Start with the 8 way crown. Lay the crown on a flat surface to determine the correct placement, when the crown is on a flat surface the angles that are not touching the ground (every other one) will correlate with the 4 corners. Attach the hip rafters (14'4" red) to the 8 way crown at angle not touching the ground by sliding the pole over the fitting and lining up the holes in the pole with those in the fitting. Place a pin in the first hole to secure the pole in place. Repeat at all four corners.


3. Attach the poles (21' 10" orange) to two of the remaining angles of the 8 way crown using the same technique as in step 2. Attach the two 22' 2" Keder Pipe to the remaining opposite angles aligning up the 8 way crown with the keder slots.

4. Attach the Bear Claw fittings to the 4 hip rafter (14'4" red), at point 6, by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin. Attach hip rafters (14'4" red) to the Bear Claw at points 1, 3, and 5. Attach corner rafters (10'6" green) to the Bear Claw fitting at points 2 and 4.

5. Attach the corner fitting to the hip rafter (point 3 only) by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin. Attach the Fan T to the rafters (21'10" orange) and to the hip rafters (points 1 & 5).

6. Join the regular t fittings to the corner poles (10'6" green) by sliding the pole over the fitting. Line up the hole of the pole with those of the fittings and place a pin.

7. The perimeter is ready for assembly. Connect the regular t's to the corners and fan t's using the spreaders (9'4" white). Slide the poles over the fittings, line up the holes, and pin the pole and fitting together. When all of the spreaders have been secured in place, the frame will be complete.
 8. Slide the keder on the tent through the keder pipe starting at the regular t going up through the 8 way crown, then come back down the other side. Repeat the step for the other end of the tent top.
 9. Secure the tent top to the frame by fastening the straps on the inside of the tent at each corner location.
 10. Start at one corner and manually lift the frame so that the leg (7'8" black) can slide over the corner fitting. Pin the leg to the fitting. (When raising the tent, raise INTO the wind)
 11. Proceed to work your way around the tent putting one leg in at a time until all legs are standing and pinned. Put baseplate under legs and attach 1" ratchets from the "O" rings at the ends of the valance to the baseplates. Tighten loosely.
 12. Now that the frame tent is erected, fasten the rest of tent top completely to the frame, using the straps on the inside of the tent. Evenly tighten the ratchets straps on the corners. Make sure the rope through the valance slides smoothly. Make sure that all of the straps are tight and that the tent top is sitting evenly over the frame. Evenly tighten the ratchets straps on the corners. Make sure the rope through the valance slides smoothly.
 13. Drive a stake about four feet out from each leg and tie off the rope or ratchet to each leg.
- Your tent installation is now complete.

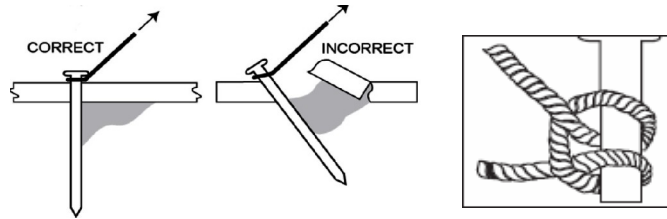

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.