



# Infinity Tent Sales

## 15 x 50 Marquee Tent Set Up Instructions

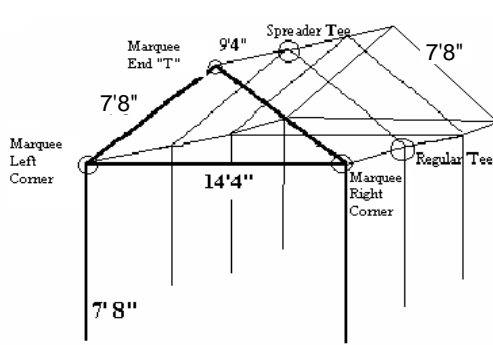

Pipe			
QTY	SIZE	COLOR	Style
2	14' 4"	Red	Spreader
15	9' 4"	White	Spreader
12	7' 8"	Black	Hip Rafter
12	7' 8"	Black	Legs

Components	
QTY	Style
2	End T's
2	Left Corners
2	Right Corners
8	Regular T's
4	Spreader T
12	Ropes
70	Tent Pins
Optional Items	
1	Brace Package
12	Weights / Stakes
12	Ratchets
12	Baseplates

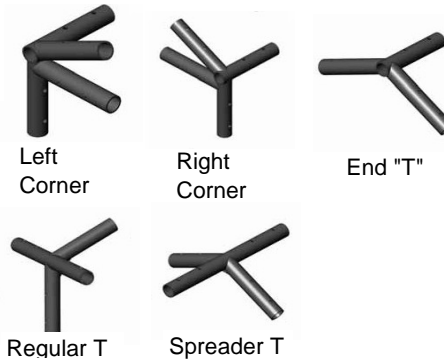

\* NOTE \* A 15 x 30 Marquee is Shown. The Tent is Expandable to any length. All You have to do is add 3 - 9'4" pipes, 2 - 7'8" pipes, 1- Spreader T, 2 - Regular T's, and 2 - 7-8" Legs to each Middle.

Pre-Site Inspection- Call your local utility companies prior to installation for any underground obstructions.

2. Begin with a marquee End T. Attach the hip rafters (7'8" black) to the End T by sliding the pole in or ( 1' vs. 2" Pipe)

1. Layout the frame parts in the estimated location peertaining to the diagram. The spreader pipe is placed out to form the perimeter, and the rafters are laid in the interior location.

3. Attach a spreader (9'4" white) from the first End T to the second End T and then attach the hip rafters (7'8" black) over the fitting and lining up the holes in the pole with those in the fitting. Place a pin in the first hole to secure the pole in place.

3. Attach a spreader (9'4" white) from the first End T. Attach the rafters from the Spreader T. Now attach another spreader from the Spreader T to the second End T and then attach the hip rafters (7'8" black).

4. Attach the marquee right and left corner fitting to the hip rafters by sliding the pole over the fitting. Line up the hole of the pole with those of the fitting and place a pin.

5. Now, the perimeter is ready for assembly. Connect the corners to the corners and the regular t's to the corners using the spreaders (9'4" white). Slide the poles over the fitting, line up the holes, and pin the pole and fitting together. When all of the spreaders have been secured in place, the frame will be complete.

### OMIT next step if 1 Piece Top

Lay the middle sections on the ground top side up. Velcro the middle sections together, then velcro the vinyl triangle ends to the middle.

6. Place the tent over the frame, by spreading the tent out on one end and "flapping" the tent top while pulling it over the top. This, flapping, will make it easier to go over the frame and prevents any snags.

7. Secure the tent to the frame by fastening the straps on the inside of the tent at each corner location.

8. Start at one corner and manually lift the frame so that the leg (7' 8" black) can slide in or over the corner fitting. Pin the leg to the fitting. ( When raising the tent, raise INTO the wind)


9. Proceed to work your way around the tent putting one leg in at a time until all legs are standing and pinned.

10. Now that the frame is standing, fasten the tent top completely to the frame, using the straps on the inside of the tent. Make sure that all of the straps are tight and that the tent top is sitting evenly over the frame.

11. Fasten either a ratchet strap or rope to the fitting at each leg location. Drive a stake approximately four feet out from each leg.

12. Attach the anchoring device (ratchets or ropes) to the stakes at each leg location.

The tent is now complete

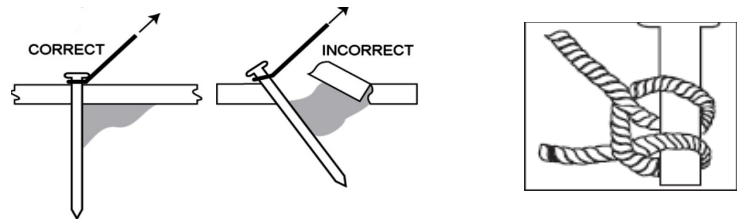

This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.